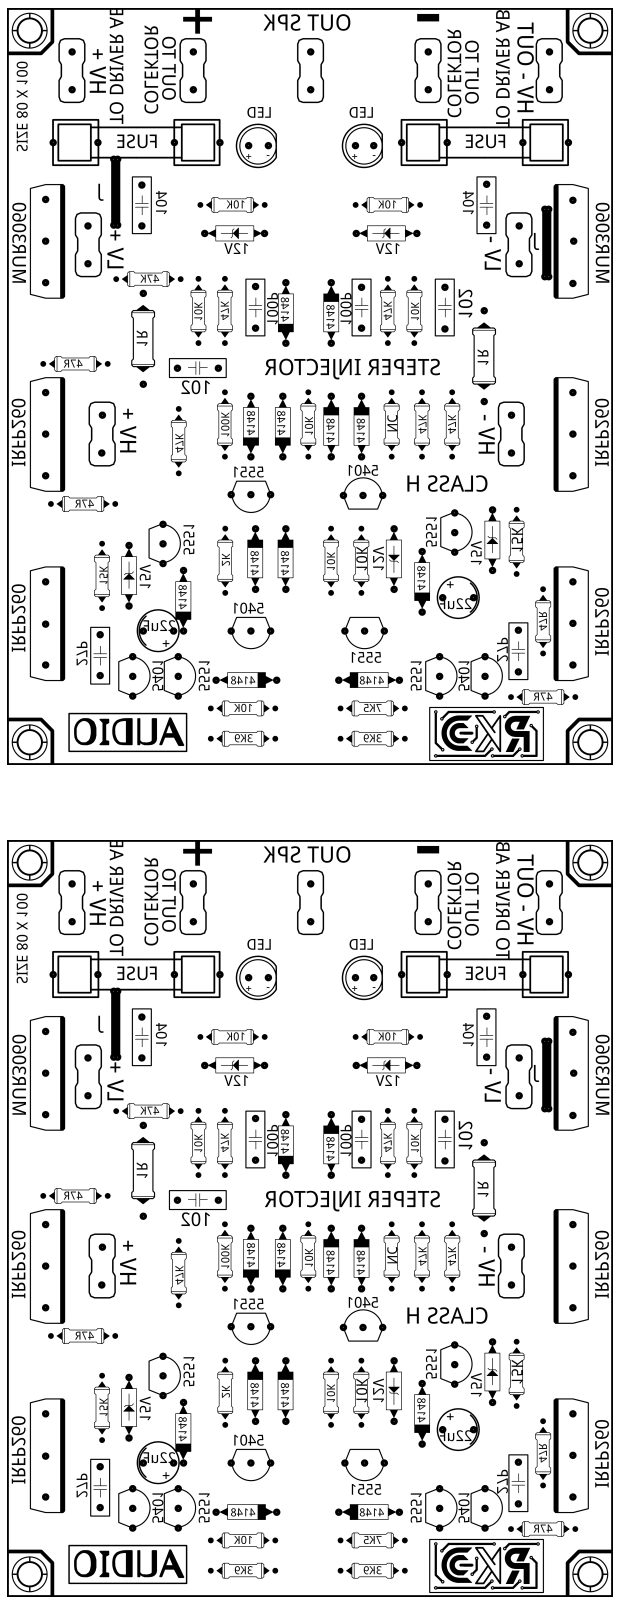
OUT SPK
TUO - VH
TO DRIVER A
COLLECTOR
OUT TO
+ VH
TO DRIVER A
FUSE
FUSE
LED
LED
SIZE 80 X 100
LV -
LV +
MUR3080
STEPER INJECTOR
102
101
1R
HV -
HV +
IRF5200
CLASS H
S401
SSS1
1SS
1SV
2SU
1SK
1K
1K0
1K2
4148
4K7
47R
10K
3K3
AUDIO

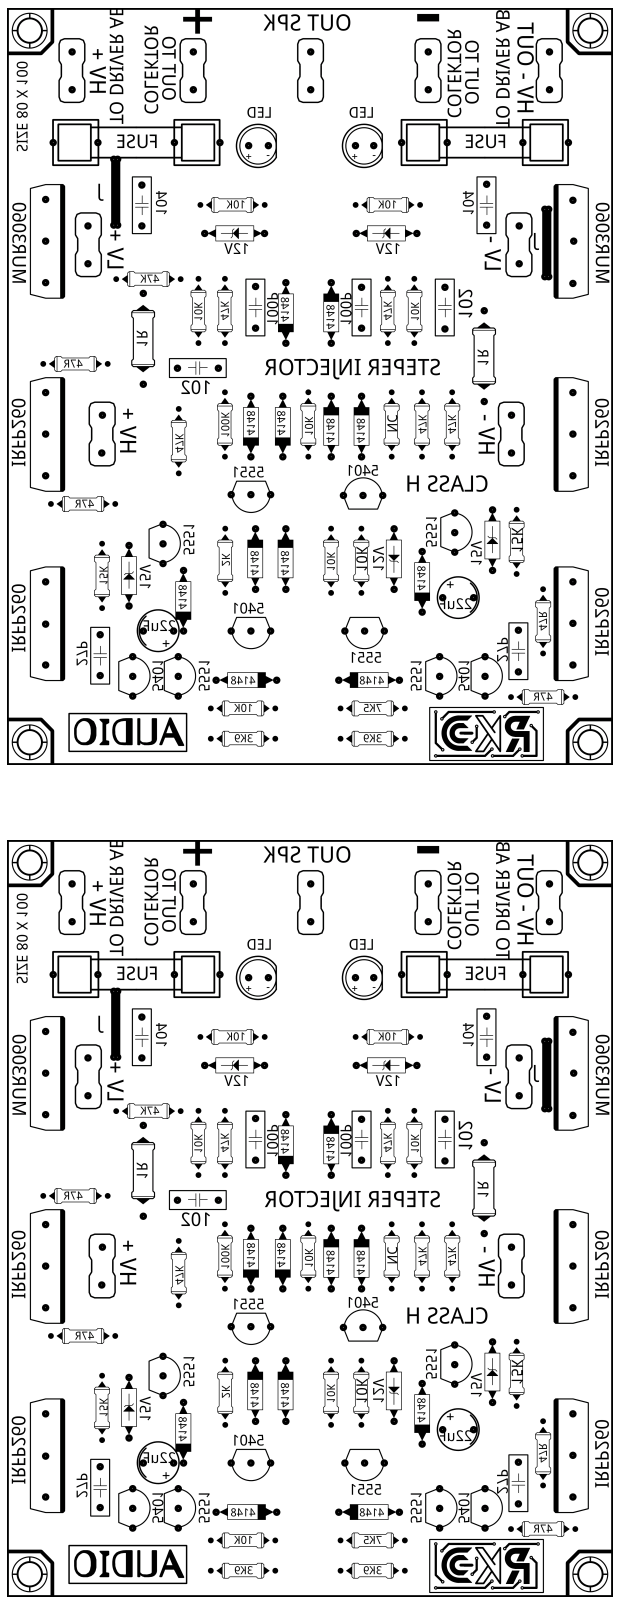
OUT SPK
TUO - VH
TO DRIVER A
COLLECTOR
OUT TO
+ VH
TO DRIVER A
FUSE
FUSE
LED
LED
SIZE 80 X 100
LV -
LV +
MUR3080
STEPER INJECTOR
102
101
1R
HV -
HV +
IRF5200
CLASS H
S401
SSS1
1SS
1SV
2SU
1SK
1K
1K0
1K2
4148
4K7
47R
10K
3K3
AUDIO

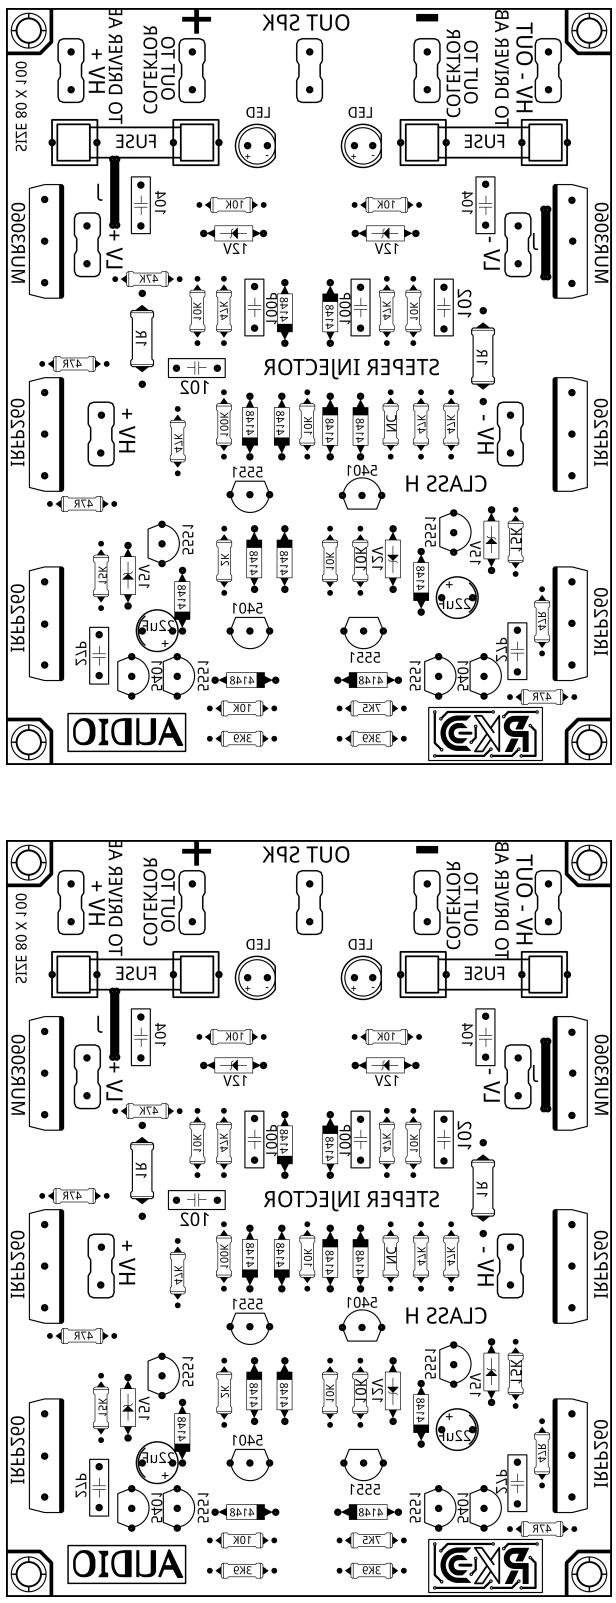
OUT SPK
TUO - VH
TO DRIVER A
COLLECTOR
OUT TO
+ VH
TO DRIVER A
FUSE
FUSE
LED
LED
SIZE 80 X 100
LV -
LV +
MUR3080
STEPER INJECTOR
102
101
1R
HV -
HV +
IRF5200
CLASS H
S401
SSS1
1SS
1SV
2SU
1SK
1K
1K0
1K2
4148
4K7
47R
10K
3K3
AUDIO